

Sound Card Instructions

- Always press the Eject/Power button before removing or inserting a Sound Card.
- Avoid touching the Sound Card's connectors. If they become dirty or tarnished, they can be gently wiped clean with a soft cloth.

Function buttons [EMD 1st Generation Diesel]

| Function buttons | Contents |
|------------------------------|--|
| Horn | 3 Selectable – Plays for as long as the button is pressed (see our website for instructions on changing horns) |
| Bell | Bell toggles on/off when button is pressed. |
| Dynamic Brake /Engine Toggle | When stationary – Turns the prime mover on and off When in motion – Holding down this button will play the sound of Dynamic Brake |
| Brake | When stationary – Plays a brake release sound When in motion – engages a brake squeal sound that will continue until the locomotive comes to a stop or the button is pressed again. |
| Coupler | Plays a coupler clank when the button is pressed. |
| RPM Override | Pressing this button will make the engine sounds drop to idle regardless of locomotive speed (coasting) – press again to re-engage. |