

Sound Card Instructions

- Always press the Eject/Power button before removing or inserting a Sound Card.
- Avoid touching the Sound Card's connectors. If they become dirty or tarnished, they can be gently wiped clean with a soft cloth.

Function buttons [EMD 1st Generation Diesel]

Function buttons	Contents
Horn	3 Selectable – Plays for as long as the button is pressed (see our website for instructions on changing horns)
Bell	Bell toggles on/off when button is pressed.
Dynamic Brake /Engine Toggle	When stationary – Turns the prime mover on and off When in motion – Holding down this button will play the sound of Dynamic Brake
Brake	When stationary – Plays a brake release sound When in motion – engages a brake squeal sound that will continue until the locomotive comes to a stop or the button is pressed again.
Coupler	Plays a coupler clank when the button is pressed.
RPM Override	Pressing this button will make the engine sounds drop to idle regardless of locomotive speed (coasting) – press again to re-engage.